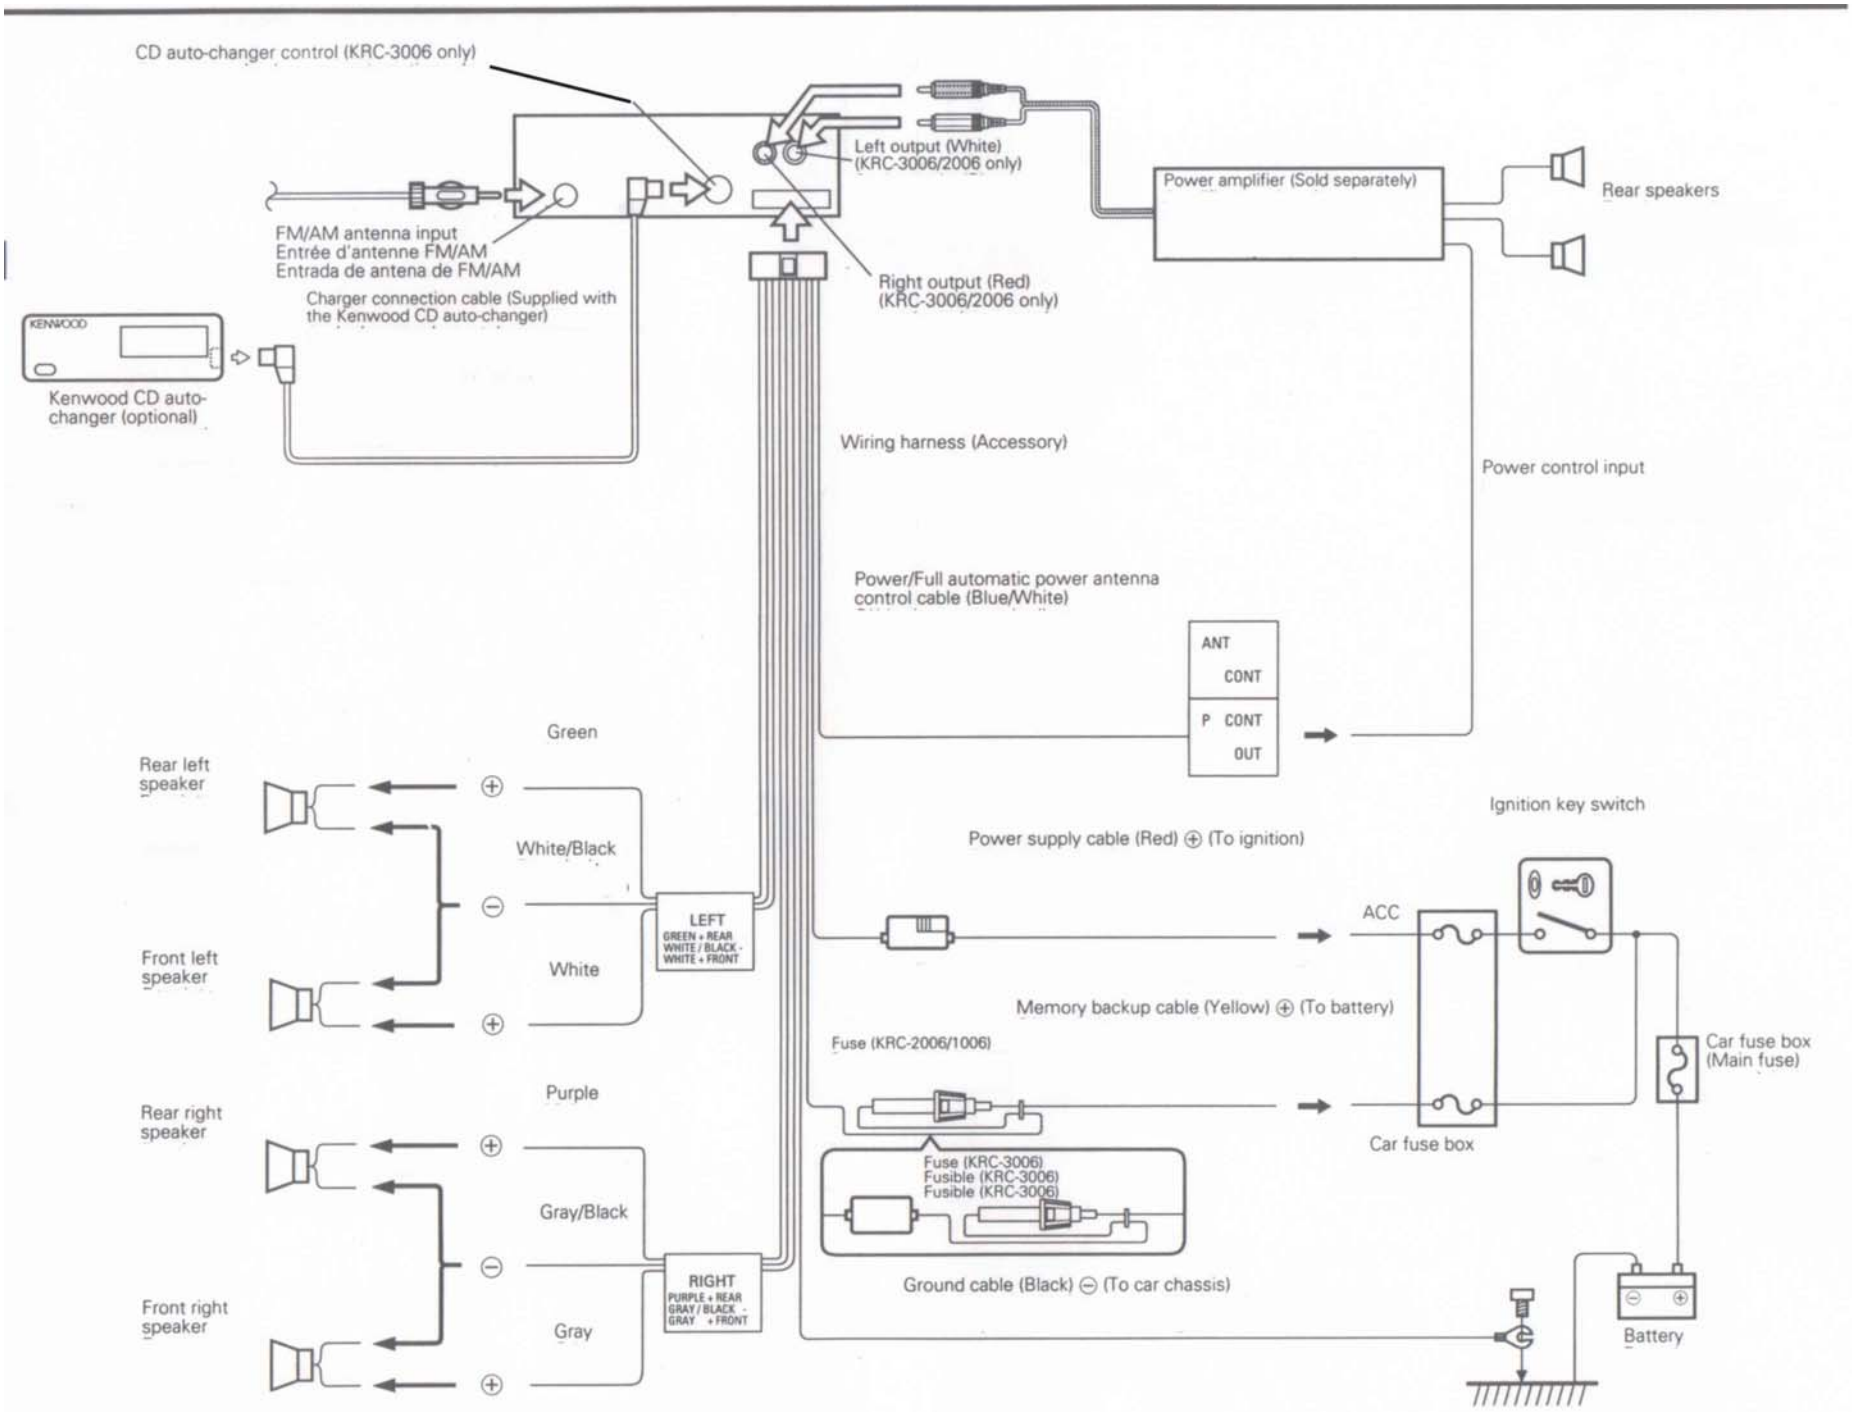
CD auto-changer control (KRC-3006 only)
Left output (White)
(KRC-3006/2006 only)
Power amplifier (Sold separately)
Rear speakers
FM/AM antenna input
Entrée d'antenne FM/AM
Entrada de antena de FM/AM
Charger connection cable (Supplied with the Kenwood CD auto-changer)
Right output (Red)
(KRC-3006/2006 only)
KENWOOD
Kenwood CD auto-changer (optional)
Wiring harness (Accessory)
Power control input
Power/Full automatic power antenna control cable (Blue/White)
ANT
CONT
P CONT
OUT
Green
Rear left speaker
White/Black
LEFT
GREEN + REAR
WHITE / BLACK -
WHITE + FRONT
Front left speaker
White
Ignition key switch
Power supply cable (Red) ⊕ (To ignition)
ACC
Memory backup cable (Yellow) ⊕ (To battery)
Fuse (KRC-2006/1006)
Car fuse box (Main fuse)
Purple
Rear right speaker
Car fuse box
Fuse (KRC-3006)
Fusible (KRC-3006)
Fusible (KRC-3006)
Gray/Black
RIGHT
PURPLE + REAR
GRAY / BLACK -
GRAY + FRONT
Front right speaker
Gray
Ground cable (Black) ⊖ (To car chassis)
Battery